



## INSTALLATION OF HAVWOODS PROFILES


---

Tools required for installation:


1. Screwdriver
2. Rubber Mallet
3. High-Grab Adhesive

Havwoods profiles are quick and simple to fit, whether you are a seasoned carpenter or a DIY beginner. Follow the steps below, ensuring that you start with a clean and clear environment and the correct profile has been selected;

**1,** Trim down the profile and base to the desired length (if necessary). Be sure to double check measurements before cutting! The top profile may also need notching out in the corners to get a neat fit with the door frame.

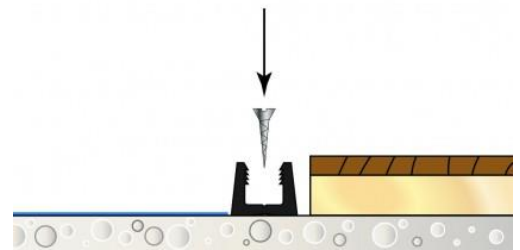

**2,** Screw and/or glue the base section to the substrate surface between the two floors (or floor and wall) that are being covered or edged. Our recommendation is to screw the base section as this will grip the profile tighter and provide a firmer fix.

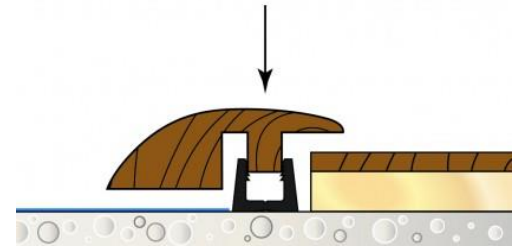

**3,** Allow the base an hour or so to settle and then simply tap the top profile into place with a rubber mallet. We recommend adding high grab adhesive to the channel for further strength and durability



***NOTE: These products are hand finished with specialist oils. As they may not be fully cured before delivery, the finish could be damaged if rubbed. AVOID HEAVY TRAFFIC. You will need to protect the profile from any water or liquids for a minimum of 14-21 days.***

Whilst every effort is made to colour compliment your floor finish and colour, exact matches are not guaranteed due to the natural variations in timber, including colouring, grain and tannins etc. in the timber.

Havwoods profiles are a bespoke hand finished product and therefore carry a 2 week lead time, and are non-refundable.